



Quick User Guide

En

Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of!

CONGRATULATIONS

Congratulations on purchasing your **Geemarc CL595** telephone. This telephone offers all the advantages of an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.

PACKAGE CONTENTS

1 Telephone base, 1 Corded handset, 1 power adapters, 1 Telephone line cord, 1 Quick user guide.


CONNECTING THE TELEPHONE

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).

Connect the handset curly cord to the base(E).

Connect the power adapter jack to base (C) then connect the power adapter plug in mains power (D).


NOTE: Use only the power adapter supplied with the phone.

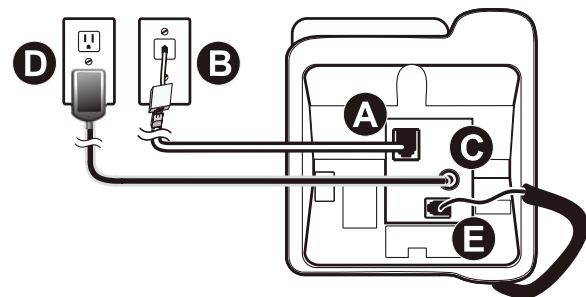

1

OVERVIEW

Base overview

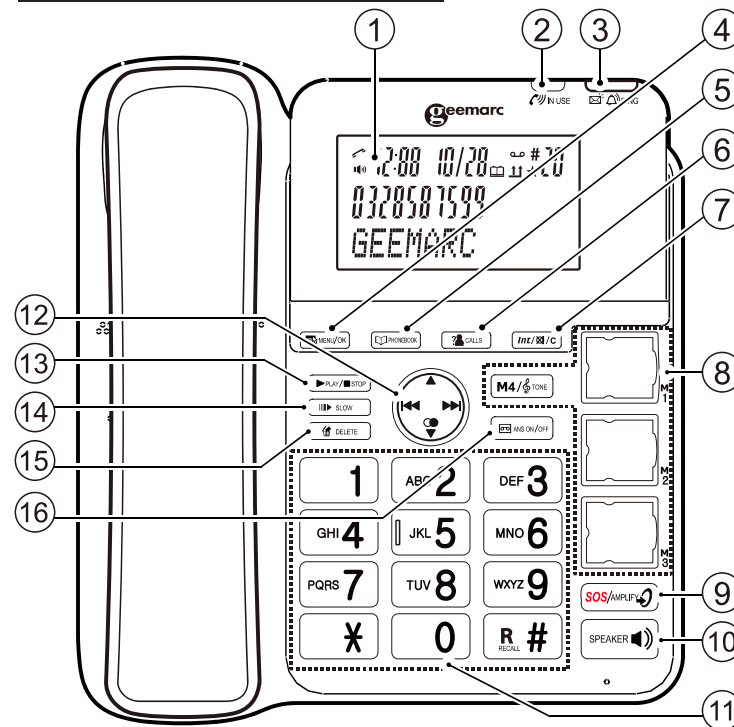

1	LCD DISPLAY
2	IN USE : ON during a call.
3	RING light <ul style="list-style-type: none"> Flashes when there is an incoming call. Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.
4	MENU / OK <ul style="list-style-type: none"> In idle mode: Press to access the main menu. In sub-menu mode: Press to confirm the selection. In Redial list/Call list: Press to store the number into Phonebook.
5	PHONEBOOK: <ul style="list-style-type: none"> In idle: Press to access the phonebook.
6	CALLS (CALL LIST) <ul style="list-style-type: none"> In idle mode: Press to access the call list.
7	Int/ /C INT / MUTE / CLEAR <ul style="list-style-type: none"> In main menu mode: Press to go back to idle screen. In sub-menu mode: Press to go back to previous level. In sub-menu mode: Press and hold to go back to idle screen. In editing / predialing mode: Press to clear a character/digit. In editing / predialing mode: Press and hold to delete all the character / digits. During a call: Press to mute / unmute the microphone. In ringing: Press to silence the base ringer. In idle mode: Press to intercom another system handset.
8	MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 TONE KEY - M4) <ul style="list-style-type: none"> In idle mode: Press to dial out to the number stored in the memory key. During a call: press M4 to increase the high frequency or the low frequencies.
9	SOS/AMPLIFY VOLUME BOOST / SOS <ul style="list-style-type: none"> During a call: Press to activate/deactivate the VOLUME BOOST function. In idle mode: Press and hold for 2 seconds to launch the emergency calling sequence set in your phone. In SOS mode: press and hold for 2 seconds to stop the emergency call.

2

10	SPEAKER <ul style="list-style-type: none"> In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.
11	ALPHANUMERIC KEYPAD, STAR (*), HASH/RECALL (#/R) <ul style="list-style-type: none"> In predial or editing mode: Press to insert a digit. 0 key in predial or editing mode: Press and hold to insert a pause. On line: Press the key R/# to make a recall.
12	NAVIGATION KEYS <ul style="list-style-type: none"> UP <ul style="list-style-type: none"> In menu mode: Press to scroll up the menu items. In Phonebook list / Redial list / Call list: Press to scroll up the list. In editing mode: Press to move the cursor one character to the right. During a call or TAM message playback: Press to increase the volume. REPEAT / OGM <ul style="list-style-type: none"> In Idle mode: Press and hold 2 sec until beep to record OGM. Press ►/■ to stop the recording. In TAM message playback mode: Press to go back to previous message. MEMO / SKIP FORWARD <ul style="list-style-type: none"> In Idle mode: Press and hold 2 sec until beep to record a memo and press ►/■ to stop the recording. In TAM message playback mode: Press to skip to next message. DOWN / REDIAL LIST <ul style="list-style-type: none"> In Idle mode: Press to access the redial list. In menu mode: Press to scroll down the menu items. In Phonebook list / Redial list / Call list view mode: Press to scroll down the list. In editing mode: Press to move the cursor one character to the left. During a call or TAM message playback: Press to decrease the volume.
13	PLAY / STOP <ul style="list-style-type: none"> In Idle mode: Press to playback messages. During TAM message playback: Press to stop playing messages.
14	SLOW <ul style="list-style-type: none"> During TAM MSG playback: Press to playback messages in slow speed.
15	DELETE <ul style="list-style-type: none"> In TAM message playback mode: Press to delete the current TAM message playback. In idle mode: Press and hold to delete all old messages.
16	ANS ON / OFF <ul style="list-style-type: none"> In Idle: Press to switch the answering machine ON or OFF. The cassette tape icon is displayed on the screen if activate.

FIRST USE OF YOUR TELEPHONE

After you have connected the power adaptor, the display asks you to select your text language with the keys ▼/▲, Press **MENU/OK** to valid.

Then enter the date with the keypad and validate by pressing **MENU/OK**.

Then enter the correct hour with the keypad and validate by pressing **MENU/OK**.

Then select your talking language with the keys ▼/▲, press **MENU/OK** to valid.

GENERAL MENU SETTING

The phone settings are always set in the same manner: Press **MENU/OK** button to open the main menu.

3

Then use ▼/▲ buttons to select an entry and confirm it by pressing the **MENU/OK** button.

The factory preset PIN code is **0000**. Example:

Set the display language on the base

Press **MENU/OK**, then select ▼/▲ language, press **MENU/OK**, then select ▼/▲ desired language and then press **MENU/OK** to confirm.

MENU SETTING

CALL LOG: ► Incoming call list

Under one incoming call: DETAILS - ADD TO PB - ADD TO BL - ADD TO PM - DELETE - DELETE ALL

PHOTO MEM: ► M1 ► M2 ► M3 ► M4

Under one memory: EDIT - VOICE TAG - DELETE

PHONEBOOK: ► ALL ► SPEED DIAL ► VIP

CALL BLOCK: ► BLACK LIST ► SETTINGS (BLOCK MODE-W/O NUM)

INTERCOM: HANDSET 1-2-3 or ALL

DATE & TIME: ► DATE FORM ► TIME FORM ► SET DATE

TEXT LANG: ► ENGLISH ► FRANÇAIS ► DEUTCH ► ITALIANO ► NEDERLANDS ► ESPANOL ► PORTUGUES...

BS SETTING: ► RING SETUP ► KEY TONE ► FLASH TIME ► FIRST RING ► DEFAULT

PAGE ALL HS REGISTER

SET SOS: ► SOS NUMBER ► SOS MSG ► SOS LANG

REMINDER: ► ALARM 1 ► ALARM 2 ► ALARM 3 ► ALARM 4

► ALARM 5 ► ALARM 6 ► ALARM 7 ► ALARM 8 ► ALARM 9

► ALARM 10

Under one alarm: ON/OFF - MELODY - RENAME - VOICE MEMO

TLK DIGITS: ► OFF ► ON

ANS. SYS: ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF

► SET TAM (TAM LANG, CALL SCREEN, TAM MSG, ANS. DELAY, REC. TIME, REMOTE ACC, CHANGE PIN, MSG ALERT)

REGISTRATION

NOTE: Up to four handsets can be registered to a single base station in option. The reference is AMPLIDECT595 U.L.E handset.

Registration a handset

On Base: Press **MENU/OK**, select ▼/▲ REGISTER.

Press **MENU/OK** to see REGISTERING... (If the registration is successful, there will be a confirmation beep).

On Handset: Press **MENU/OK**. Use ▼/▲ to select HS SETTING.

Press **MENU/OK**. Use ▼/▲ to select REGISTER.

Press **MENU/OK** and REGISTERING is display.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

PHONEBOOK

Your phone can store up to 50 private phonebooks with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 10 characters for the name.

Phonebook entries are stored alphabetically by name and are identical in the base and handset.

To add new entry

In idle mode:

1. Press **MENU/OK**, and ▼/▲ to select **PHONEBOOK** and press twice **MENU/OK** to access the phonebook list (or empty).

2. Press **MENU/OK** and select **ADD**.

3. Press **MENU/OK** then enter phone number.

4. Press **MENU/OK** and enter the name.

5. Press **MENU/OK** to save.

4

SET SPEED DIAL KEY

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK**.
2. Press **MENU/OK** and **▲/▼** to select **SPEED DIAL**.
3. Press **MENU/OK**, use **▲/▼** to select the speed dial key.
4. Press **MENU/OK**, select **ADD** or **EDIT**.
5. Press **MENU/OK** then enter the phone number.
6. Press **MENU/OK** then enter the **NAME**.
7. Press **MENU/OK** to confirm.

To use one speed dial key, **press and hold** in idle mode the key between 1 to 9 for 3 seconds (you hear a beep of confirmation). It is the same speed dial keys for the base and for the handsets cordless.


SOS EMERGENCY CALL

SOS settings

You need to set the SOS numbers before you can make SOS emergency calls.

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS NUMBER**.
3. Press **MENU/OK** and **▼/▲** to select the SOS number to edit (**SOS 1, SOS 2, SOS 3** or **SOS 4**).
4. Press **MENU/OK** and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
5. Press **MENU/OK** and enter a phone number or edit the number stored already.
6. Press **MENU/OK** and enter a new name or edit the name stored already.
7. Press **MENU/OK** to confirm or **Int/✕/C** to delete.

Make SOS emergency calls

Press and hold 2 seconds **SOS**  on the base to launch the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call will be made to the SOS 2 number, and so on. See note.

NOTE:

- The other party receiving the SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open else the phone stops the call 10 seconds after.
- To stop the procedure launch by error, press and hold the SOS key until the alarm SOS stop.

Record SOS messages

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **RECORD**.
4. Press **MENU/OK** to start SOS message recording and "RECORDING ANNC..." will be displayed.
5. Press **MENU/OK** to save your SOS message.

Play SOS messages On base

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **PLAY**.
4. Press **MENU/OK** to start SOS message playback.
5. Press **▶/■** **PLAY/STOP** to stop SOS message playback.

PICTURE BIG BUTTON MEMORIES

You have the choice to store 3 picture memories and one direct memory on the base.

 
1. Press **MENU/OK**, and **▼/▲** to select **PHOTO MEM**.
2. Press **MENU/OK**, and **▼/▲** to select **M1** to **M4**.

3. Press **MENU/OK** and **▼/▲** to select **ADD** or **EDIT** and **VOICE TAG**.
4. Press **MENU/OK** then enter number.
5. Press **MENU/OK** then enter name.
6. Press **MENU/OK** to save.

You have the option to enter a voice name in choose **VOICE TAG** and **RECORD** at the point 3.

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

NOTES:

- To use a picture big button memory in idle mode, press the picture on the base.
- If you want to pass the call from the speakerphone to the handset, lift the handset off the base to take the call.
- If the handset is not placed on the base, press **SPEAKER**  to take the line in speakerphone mode and place the handset on the base.

ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

Switching Answering Machine On/Off

Press **ANS ON/OFF** to switch the answering machine **ON** or **OFF**.

Play Messages on TAM

If you have new messages, the display will show e.g. **2 NEW MESSAGES**, which means you have 2 new messages. The new messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

Press **▶/■** **PLAY/STOP** to start the playback.

NOTES: After new message is played, the new message will be saved as an old message automatically unless it is deleted.

During the playback:

1. Press **MENU** and **▼/▲** to select **STOP, FORWARD, PREVIOUS** or **DELETE** to perform the following functions during message playback.
 - **STOP:** Stop the current message playback and return to the **ANS. MACHINE** menu.
 - **SLOW ON:** to reduce the speed of the playback.
 - **FORWARD:** Skip to play the next message.
The date and hour information of the next message will display if there is next message.
 - **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.
 - **DELETE:** Delete the current message and the next message will be played.

2. Press **MENU** to confirm the setting.

Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or **TIME SAVER**.

The **TIME SAVER** function answers calls after 6 ring signals, until the first new message has been registered then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings it means there are no messages recorded and you can hang up before you are charged for the call.

1. Press **MENU/OK** and **▼/▲** to select **ANS.SYS**.
2. Press **MENU/OK** and **▼/▲** to show **SET TAM**.
3. Press **MENU/OK** and **▼/▲** to select **ANSWER DELAY**.
4. Press **MENU/OK** and **▼/▲** to choose: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS** or **TOLL SAVE**.

5. Press **MENU** to confirm the setting.

REMOTE OPERATIONS

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press *****.
3. Enter the 4-digit Remote Access PIN (default PIN is **0000**).
4. Press the following keys to carry out your desired function.

KEY	FUNCTION	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

NOTES:

- When your answering machine memory is full, the answer mode will change to **ANSWER ONLY** automatically.
- It will change to **ANS & RECORD** mode automatically after some messages have been deleted.
- You cannot delete new messages until they have been listened to.

FUNCTION MESSAGE ALERT

When you have a new message, you can hear a beep every 10 seconds.

If you want deactivate this beep, follow the procedure.

1. Press **MENU/OK** and **▼/▲** to select **ANS.SYS**.
2. Press **MENU/OK** and **▼/▲** to show **SET TAM**.
3. Press **MENU/OK** and **▼/▲** to select **MSG ALERT**.
4. Press **MENU/OK** and **▼/▲** to select **OFF**.
5. Press **MENU/OK** to confirm.

ALARM FUNCTION

You have the choice to enter 10 Alarms.

1. Press **MENU/OK** and **▼/▲** to select **REMINDER**.
2. Press **MENU/OK** and **▼/▲** to select your alarm.
3. Press **MENU/OK** and **▼/▲** to select **ON/OFF**.
4. Press **MENU/OK** and select **ON**.
5. Press **MENU/OK** and enter the time.
6. Press **MENU/OK** and choose the frequency.
7. Press **MENU/OK** to confirm.

TALKING FUNCTION

You have the choose to activate or deactivate the function Talking Digits.

Activate: this function announces the digit dial or the CID number when you receive a call and that you have subscribed to the service.

1. Press **MENU/OK**, and **▼/▲** to select **TLK DIGITS**.
2. Press **MENU/OK**, and **▼/▲** to select **ON** to **OFF**.
3. Press **MENU/OK** to confirm.

FUNCTION FIRST RING

Sometimes, our phone rings one time to inform that we have any voice message on the line. To remove this ringer, you must activate the function.

1. Press **MENU/OK**, and **▼/▲** to select **BS SETTING**.
2. Press **MENU/OK** and **▼/▲** to select **FIRST RING**.
3. Press **MENU/OK** and select **ON**.
4. Press **MENU** to save.

MAINTENANCE

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATIONS

CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive RED 2014/53/UE.

The CE declaration of conformity may be consulted at www.geemarc.com

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

TECHNICAL SPECIFICATIONS

Basic Information

Valid Range: Indoor : 50m | Outdoor:300m

RF Parameter

Frequency: 1.88 GHz to 1.9GHz

Nb Channels: 10

Power Supply

Input:100-240V 50/60Hz; Output: 6V, 800mA adapter



For product support and help visit our website at www.geemarc.com
United Kingdom: 5B Swallow Court, Swallowfields, Welwyn Garden City, Hertfordshire, AL7 1SB, UK
telephone **01707 387602**
or fax **01707 832529**

