

4G Phone with SOS Emergency Call

English



NOTE:

This phone may be used by people with hearing problems. It has a variable volume headset until 40dB. On first use, make sure that the headset volume is set to minimum. The hearing impaired person may subsequently increase the volume to suit their needs.

Contents

Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of!

Contents	1
Prior To Use	5
- Congratulations	5
- Safety Precautions	6
- Setting Up	7
• Check the contents of the box	7
• Choosing a location	7
• Battery and Adapter installation	7
- Connecting the Telephone	8
- Wall mounting	9
- Location of controls	10
- Keys description	11
- LCD description	12
Settings	14
- Phone settings	14
• Time & Date	14
• Language settings	14
• Restore factory setting	15
- Call settings	15
• Voice mail server	15
• Divert Call	15
• Call waiting	15
• Call barred	16
• Reply SMS after reject	16
• Call time minute reminder	16
- Display	16
• Contrast	16
• Backlight	16

- Security	17
• Pin	17
• Blacklist	17
- Connection	17
- Version	18
- Led switch	18
- Low battery to SMS	18
- Boost setting	18
• Tone Control	18
• Boost lock	19
- Short key, Silence mode	19
Profiles	20
- Ring settings	20
- Adjust volume	21
- Other alert rings	21
Using the telephone	22
- Outgoing call	22
- Incoming call & Receiving a call (CID)	23
- Dial from Contacts	23
- Speed dial	23
- Photo key dialing	24
- Dialing a Number from the Redial List	24
- Dialing a Number from the Missed Calls List	24
- Dialing a Number from the Received Call List	24
- Muting the Microphone	24
- Using the Amplification Function	25
- Using your Phone with hearing aids	25
- Hands-free	25
- Tone Response	25

Contents

Phonebook	26
- Contacts.....	26
- Create a Phone Book Entry	26
- View Contacts Entries.....	27
- Options within Contacts.....	27
- Store number in Speed dial or Photo key.....	28
SMS	29
- Message (SMS).....	29
- Send a Text Message.....	29
- Receiving a Text Message	30
- Reviewing Stored Text Messages (Inbox).....	30
- Outbox	30
- Drafts	31
- Delete SMS.....	31
- Templates	31
- Broadcast Messages	32
- SMS Settings	32
- Messages Capacity	32
Call Record	33
- Call logs	33
- Display Missed Calls.....	33
- Display Outgoing Calls	34
- Display Received Calls	34
- Delete All	34
- Call duration.....	34
Application	35
- Application	35
• Alarm.....	35
• Timer.....	35
• Bluetooth.....	35
- Name Recorder	36

SOS	37
- SOS function.....	38
- SOS Number Settings	38
- SOS Announce message	38
- SOS Message Record	39
- SOS Text Message.....	39
- Pairing a new SOS remote	39
- Battery replacement.....	40
- Range	40
Technical specifications	41
Features	42
Troubleshooting	43
Safety Information	45
Hearing aid information	47
Network services	48
Guarantee	49
Recycling Directives	50

Prior To Use

Congratulations

Congratulations on purchasing our product.

Please read the manual carefully to learn all about the features available and how your telephone works. This will help you to get the best of your new phone.



Safety Precautions

To prevent any risk of electrical shock and injury, please follow these basic safety precautions before using the phone:

1. Carefully read and observe the instructions in this manual.
2. The phone is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to its minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse.
3. When cleaning, first unplug the phone. Then use a damp cloth to wipe it. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord as this may cause damage.
5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
6. Refer servicing to qualified service personnel only.
7. Use only the power supply provided.
8. Install the telephone where no one will step or trip on the cord.
9. Do not overload wall outlets or extension cords as this can increase the risk of fire or electrical shock.
10. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
11. Never spill liquid of any kind on the telephone.

Prior To Use

Setting Up

CHECK THE CONTENTS OF THE BOX

Box should contain:

- Handset with handset cord and phone base
- 3.7V, 900mAh Li-polymer rechargeable battery
- User's manual
- Remote for emergency call with his battery CR2025
- Power adapter (5V DC 2.0A, 10W)
- Type A to type C USB cable (length 1.8m)
- Wall mount bracket

CHOOSE A LOCATION

The unit should be located in an area where it is easy to see the visual display and lighted ringer.

Choose a location that is out of the way of normal daily activities so that it is not knocked or there is no danger of tripping over wires.

BATTERY AND ADAPTER INSTALLATION

For using all features e.g. Hands-Free and Amplification, it is essential that the telephone is powered by the power supply or the battery.

Unclip the battery door with a screw driver in the hole.

Connect the rechargeable battery plug to the battery socket in the open battery compartment. Pay attention to the correct polarity.

Only use the rechargeable battery provided with the phone.


Close the battery compartment cover.


Pay attention that the telephone is not connected mains power connection when the battery are being inserted or replaced.

Battery low: *If battery is low, the phone will emit loud **BEEP**, show "battery low" in the display and send a SMS at the phone number recorded. Please plug in USB Type C power adapter into the device.*

Connecting the telephone

- Connect the handset coil cord (RJ9 plug) (1).
- Plug your **Nano SIM card** to SIM slot at the rear of the base (2).
- Unclip the battery door with a screw driver in the hole.
Connect the rechargeable battery plug to the battery socket (3).
In case of power failure, battery are required for the ring.
- Snap the battery door back in place.
- Connect the USB cable (type A plug) to the adapter (4).
- Connect the adapter cord (type C plug) to the telephone (5).
- Connect the adapter to you wall socket (*) (6).

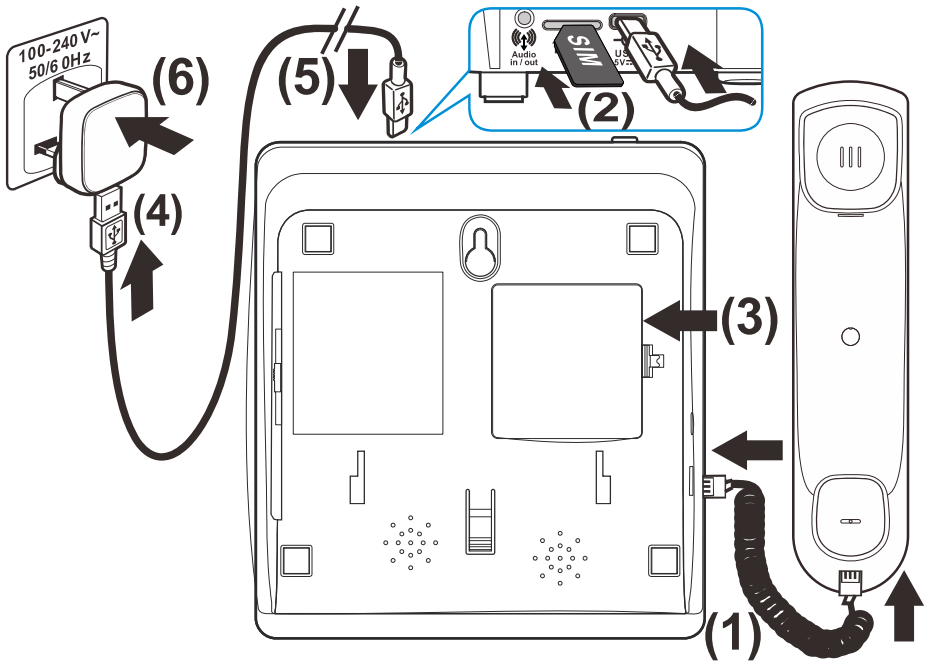

- Press and hold Power(mute) on/off key , the phone will be turned ON.


(*) Classified “hazardous voltage” according to EN62368-1 standard.

Note : *Rechargeable battery is for back up purpose in case of power failure, you should plug in USB type C power adaptor all the time.*

Prior To Use

Wall mounting

The telephone can also be installed on a wall. You require two screws in order to fix the telephone on a wall.

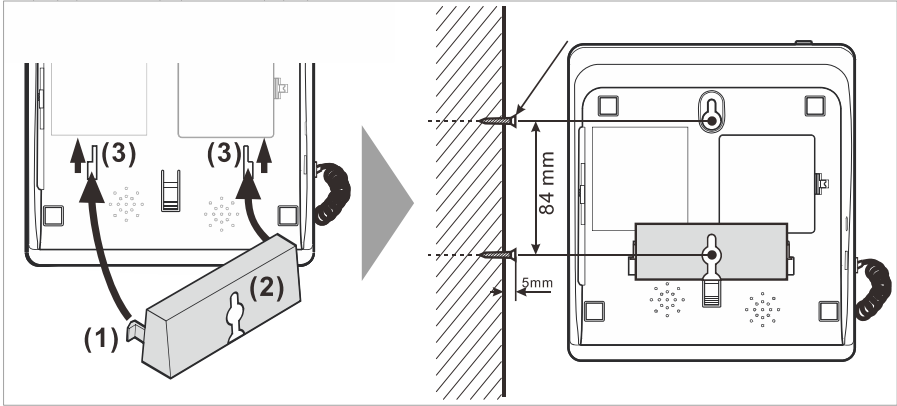


Feed the guide tabs (1) on the wall-mounting bracket (2) in the slots (3) on the rear side of the telephone. Slide the wall bracket (2) 10mm upwards until it audibly snaps into place.


Warning: Ensure that there are no cables or pipes etc. under the surface of the wall where you want to drill the holes.

Drill two holes whose distance **84mm** in vertical, insert the screws and allow them to project **5mm** from the wall.

Position the telephone on the bracket, fit the screws in the slots and slide the telephone downwards a little.

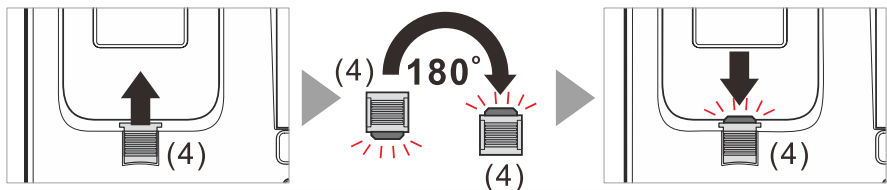



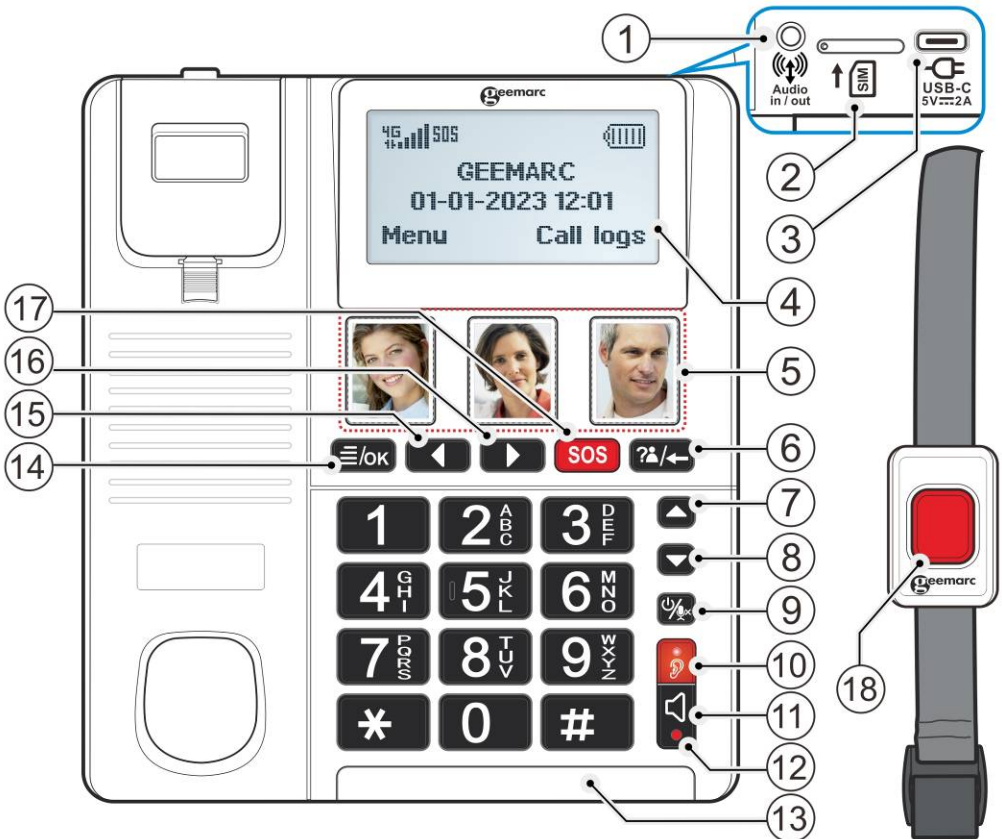








Turn the receiver hook (4) in the receiver cradle **180°** so that the receiver can be hooked in.





1. Audio In/Out (∅3.5mm)CTIA	10. Receiver +40 dB Boost button
2. Nano SIM card slot	11. Handsfree
3. DC IN (type-C)	12. Handsfree mode indicator
4. LCD screen	13. Incoming ring indicator/new call
5. Photo keys (x3)	14. Menu / OK button
6. Call log / Backspace / Delete	15. Left / Contacts
7. Up / Adjust Volume setting	16. Right / Write SMS
8. Down / Adjust Volume setting	17. SOS button
9. Power (mute) on/off	18. Emergency call unit

Keys Description


	<p>The 3 pictures keys are used as one-touch speed dial keys.</p>
	<p>Press this key to enter in Menu.</p> <p>Press this key to access to the function EDIT when you are in Phonebook contact.</p> <p>Press this key to access at the function DELETE or DELETE ALL when you are positioned on CID number.</p> <p>Press OK to confirm your selection.</p> <p>Press OK to start a call when the contact is selected.</p>
	<p>Call logs / Backspace / Delete</p> <p>Call logs list, as described in page 24.</p> <p>When you dial a phone number, press this key will delete the last digit(s).</p>
	<p>Left / Right keys, Short cut in stanby mode:</p> <p>Left key: Contacts list.</p> <p>Right key: Write an SMS.</p>
	<p>This key is used for emergency dialling.</p>
	<p>Highlight or scroll through the menu options.</p> <p>Short cut: Adjust Volume setting</p>
	<p>Power on/off key, Mute key.</p> <p>Long press to power the telephone on and off.</p>
	<p>When you press this key during the call, the LED turns ON to inform you that the Boost mode is activated.</p>
	<p>Handsfree / Make / Answer / End a call.</p> <p>Activates the speakerphone if pressed during a call, as described in page 25: Hands-free.</p> <p>The LED is ON to inform you that the function is activated.</p>

	<p>Hash key Press to switch between different input modes while composing a text message or editing a contact name. In stanby status, Press and Hold to enable / disable silence mode.</p>
	<p>Asterisk key Press this key to insert one or more symbol while composing a message or editing a phonebook entry name. (more detail please see P22: Asterisk key).</p>

Note : **Menu (OK)**  key and **Call logs (Back space)**  key also work as soft keys i.e. they take on different functions depending on the menu displayed. The current function is always displayed at the lower left and right corner.





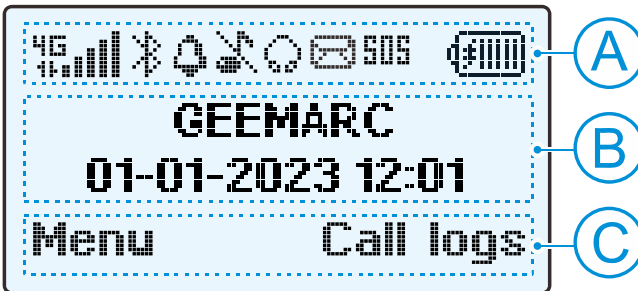












LCD description

The LCD screen is split into three distinct areas:



- A The icon area (status bar).** This is found at the top of the screen. This displays the various system icons which help you to use the telephone.
- B The main area.** This is found across the centre of the screen. It displays the following:
 - number being dialled
 - caller ID information
 - phonebook
 - menu information
 - in standby mode current time, date and service provider name.
- C The soft key area.** This is found at the bottom of the screen.

Prior To Use






























	Signal Strength icon This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength. There is one of these icons per SIM.
	VoLTE You are in 4G and can make a good call. E means that the network is in 2G
	Alarm icon The alarm has been set to ring at a specified time.
	Battery Status icon This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.
	Roaming icon A roaming call is taking place i.e.international call – outgoing or incoming.
	SMS icon A new SMS (text message) has been received.
	Silent icon (press and hold # key to activate / disable) The telephone is in silent mode. There will be no call alert.
	Headset icon The headset is plugged in.
	Blue tooth icon When blue tooth is ON.
	Ear symbol If Boost is on, Ear icon will be showed on the status bar.
	Missed Call
	During conversation You are on line.
	SOS is ON
	Use power adaptor only /  Use battery only
	Battery Charging /  Battery full Charged

Phone settings

Time and Date


Time and date has been preset to be obtained from your service provider. You can still able to set it manually.

User is also able to set the time, date format.

- Press **Menu/OK**  key to display the main menu list.
- Press the  keys to move to **Settings** →  → **Phone settings** →  → **Time & date**, and press  to move to **Set time**.
- Press  key twice, enter the correct hour and minutes with the keypad then press .
- Press the  key to move to **Set date**, Press  key, Enter the correct day, month and year with the keys  or  or keypad, and press .
- Press the  key to move to **Time Format**, Press  key, Use  or  key to move to the desired date format **12 Hours** or **24 Hours** then press .
- Press the  key to move to **Date Format**, Press  key, Use  or  key to move to the desired date format **Year-Mon-Day / Mon-Day-Year** or **Day-Mon-Year** then press .
- Press the  key to move to **Update time settings**, Press  key. Use  or  key to move to the desired **Auto update time** or **Manual update time** then press .
- Press  key to Done.
- Press  key to Exit.

Note: if you have the function CID on your network, at the first call, the date & Hour will be set automatically.

Language settings

Menu/OK  → **Settings** → **Phone settings** → **language**

User can change the languages. Up to 12 languages are available. (English / French / German / Spanish / Portuguese / Arabic / Dutch / Italian / Hebrew / Russian / Polish / Czech.

Settings

Restore factory setting

User can restore factory setting. It needs password to proceed. The password is 1-2-3-4.

Call settings

Menu/OK  → Settings →  → Call Settings

Voice mail server

The voicemail function allows you to listen to any voicemail messages people may have left for you.

The voice mailbox is a network service to which you may need to subscribe. Contact your service provider if in doubt.

If your service provider does give you access to voice mail, the telephone number used to access the voice mail system will normally be set up on your telephone. If it is not, you can manually input your voice mail number here.

From standby, you can access voicemail by simply pressing and holding 1. You will be connected to voice.

Divert Call

Incoming calls can be diverted to a specified telephone number (voicemail number generally). There are 5 options available with this function:

- **Divert all:** Call divert is applied to all incoming calls.
- **If Busy:** Call divert is applied to all incoming calls if your line is busy.
- **If No Answer:** Call divert is applied to all incoming calls if you do not answer the call.
- **If Unreachable:** Call divert is applied to all incoming calls if your phone is switched off or you are not in a service area.
- **Cancel all diverts.**

Call waiting

This can be activated or cancel or check status. Please check that this service is available from your service provider.

Call barred

There are many settings available:

Call Barring: Incoming and outgoing calls to and from your phone can be limited. There are 4 options available with this function:

- **All outgoing Calls:** No outgoing calls can be made.
- **All incoming Calls:** No incoming calls can be received.
- **Incoming calls when roaming**
ISD calling: If activate it, then all international outgoing call will be blocked. (Password is **0000**).
- **Dial when INTL roaming:** If activate it, then no outgoing call can be made during roaming, no outgoing (Password is **0000**).
- **Cancel all barring.**

Reply SMS after reject:

If you set it to ON, then if user rejects the incoming call, the display will show “**1 missed call**” to inform you that you have misses an incoming call, select **EXIT** then “**Reply**” will be showed. Press **OK** then you can send a template SMS message in answer.




Call time minute reminder

Set it **ON**, the phone will emit a beep according to your setting. Customize if you want a reminder of how long you have been on the phone. You have the possibility to set on **OFF, 50, 55, 60** seconds or customize this time.

Display





Menu/OK  → Settings → Display

Contrast

- Use **Left**() / **Right**() key to move to the desired contrast then press **Menu/OK**  to valid.

Backlight

Backlight auto off time (15s /30s /1min /5min), default is 15 seconds.

- Use **Up**() / **Down**() key to move to the desired time then press **Menu/OK**  to valid.
- Press  key to exit.

Settings

Security

Menu/OK  → Settings →  → Security

PIN








This mobile telephone allows you to set up Pin code to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your **SIM card**. The PIN code help to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The **PUK (PIN)** and **PUK2 (PIN2)** codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.

Blacklist

The ability to Reject and blacklist numbers except the SOS numbers.

- **Blacklist:** Select **Blacklist** then **Options**, use  and  key to select **New** (enter the name and the phone number) or **Import contacts** then press  to valid.
- Select your contact in the list then press  to valid.
- Select **Mark** then press  to valid.
- Select Options then press .
- Press  key to exit.

Note: You have in option the possibility to delete, delete all, edit an contact or all contacts of the blacklist.

Connection

Menu/OK  → Settings → OK → Connection

You have the possibility to set the **DATA Service** or **Data roaming**.

Network selection: you have the possibility to select your network operator.

Network type: choose the type of network.

Volte: Voice over Long-Term Evolution, this function is to make an call in 4G quality.

Version

Menu/OK /OK → Settings → OK → Version


Hardware and Software version will be showed here. Normally it is for technical service department.

Led switch

Menu/OK /OK → Settings → OK → Led switch

You have the possibility to activate or no the Led situate in front of to inform you that you have a new message or a new call.

Low battery to SMS

Menu/OK /OK → Settings → OK → Low battery to SMS

When you have activate this function, the phone number that you have set will be receive two SMS, one to inform him that the battery is low and one second one hour after.

In this case, you must double check that the power adaptor is properly connected or wait that the power failure is finished.

Boost setting



Menu/OK /OK → Settings → OK → Boost setting

In choose this menu, you can set the tone of your handset and to activate or no the boost in automatic.

Tone Control:

You have the choose between 3 possibilities: **Normal**, **Middle** and **Treble**.

If you choose **Treble**, you increased the high frequencies, if you choose **Bass**, you increase the Low frequencies.

During your call, you can change your setting inusing the keys **Left** () / **Right** (). You can see on the display the Tone control position that you have selected.

The Tone modifications is activated only with the boost function activated.

Settings

Boost lock

When you activate this function, every times that you will do a conversation with the handset, the boost will be activate automatically.

Other settings

- **Short key**

When you press a short key, you have directly Access at the function:




Up arrow  : **Volume adjustment (Profiles)**

Down arrow  : **Volume adjustment (Profiles)**

Right arrow  : **Write an SMS**

Left arrow  : **Contacts list**

- **Silence mode**

Press and Hold  key to enable silence mode in standby mode, if silence mode is enabled, **silence mode** icon  will be displayed. Press and Hold  key to disable silence mode.

In the Menu Profiles, you can set the different volume of the alert, ringer and talking for example.

Ring settings

- Incoming ringtone
- Message ringtone
- Talking CID

Adjust volume

- Incoming ringtone
- Message ringtone
- Alarm ringtone
- Speaker volume
- Handset call volume
- Power ringtone
- Talking keypad


Other alert rings




- Battery low alert

Ring settings


You have the possibility to select your ringtone for the incoming call or message and Talking CID.




• Incoming ringtone

Menu/OK  → Profiles → Ring settings → Incoming ringtone

Use  and  key to select your ringtone desired of the 10 that you can hear when you change then press  to valid.


• Message ringtone

Menu/OK  → Profiles → Ring settings → Message ringtone

Use  and  key to select your message ringtone desired of the 6 that you can hear when you change then press  to valid.

Profiles

• Talking keypad


Menu/OK  → Profiles → OK → Ring settings → OK
→ Talking CID

When this function is activated, then pressing the numeric keys on the keypad, the phone will announce the number you pressed.

When you receive a call, the phone will announce all incoming telephone number.

Adjust volume



Menu/OK  → Profiles → Adjust volume

or use the short key up  to access at the different function below. You have the possibility to set:

- **Incoming ringtone:** to set the incoming ringer volume.
- **Message ringtone:** to set the ringer level when you receive a new message.
- **Alarm ringtone:** to set the ringer level for your alarm.
- **Speaker volume:** To set the volume of the speakerphone level.
- **Handset volume:** To set the receiving volume for the handset.
- **Power ringtone:** To set the volume of the animation when you turns on or off your phone.
- **Talking keypad:** to set the level of the voice when you press one key.

Note: Use **Left** () / **Right** () key to set the correct level desired and press  to valid.

The level position 0 is to set the volume on OFF position.

During conversation: user can press **Up or Down volume key** ( and ) to change handset **receiver** or **Speaker** volume (if the call is in Speakerphone mode).



Other alert rings.

Menu/OK  → Profiles → other alert rings


- **Battery low alert:** when the battery is low, the phone send a beep alarm information and 2 SMS to the desired contact.

Using the telephone


Outgoing call

1. Dial the number, the display will show and talk (if activated) the number you dialed. Press  (**Call log / Backspace / Delete**) key to delete an incorrect digit.
2. Pick up the handset, **or**
Press **SPK** key  (SPK key LED will be ON).
3. Then your input number will be dialed out.

OR

Pick up the handset **or** press **SPK** key , then input the number you want to dial.

Notes:

- *During dialing the phone numbers, you can put the handset back to Cradle, or Press again **SPK** key  to end the dialing.*

Asterisk key *

Press this key to insert one or more symbol while composing a message or editing a contact entry name. Then use the navigation keys to move to the symbols you want to insert.

If edit telephone number, press this key to insert special digits (e.g * / + / P (pause) / W).

To place an international call you need to press **+** before the country code. Simply, press * key twice.

Some foreign telephone networks have extension lines that can not be dialed as dial-through, but need to be entered by the keypad. To dial these directly, press * quickly three times in a row after the telephone number. The **p** character will appear and then you can enter the extension.


Hash Key

Press to switch between different input modes while composing a text message or editing a contact name.

Using the telephone


Incoming call & Receiving a call (CID)

If there is incoming call, the phone will announce the caller number (if the function talking CID is activated) then ring and the Visual ring indicator will flash.

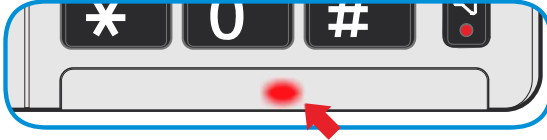

* Go to **Menu/OK**  → **Profiles** → **Ring Settings** → **Talking CID** to enable talking CID function.

* Go to **Menu/OK**  → **Settings** → **Led switch** to turn on or off the LED information.

1. To answer a call, lift the handset or press on **SPK**  or press the remote button and speak.



If you press on remote SOS button, your phone is in speakerphone mode.





2. Adjust your volume if required by pressing  or  key.

3. To end the call, replace the handset on the base or press .

Or you can press on remote SOS button to stop the call in speakerphone only.

Dial from Contacts

Menu/OK  → **Contacts** → **OK**  or left short key

Use **Up**  and **Down**  key to move to the desired contact number to call or press on the first characters of your contact name. For example, on the key 3 one time for one contact starts by D then use **Up**  and **Down**  key.

Pick up the handset, or Press **SPK** key  (SPK key LED will be ON).

Speed dial

You can assign telephone number to Numeric keys 2~9. If telephone number is saved in any of 2~9, then press and holding 2~9 in standby mode will dial out the number that stored in the speed dial memory. To store a speed dial key, go to **page 28 (Store number in Speed dial or Photo key)**.

Photo key dialing

You can assign telephone number to Phone keys(M1-M3). Press and hold photo key at standby mode will dial out the number that stored in Photo keys memory.



To store one memory picture key, go to **page 28 (Store number in Speed dial or Photo key)**.

Dialing a Number from the Redial List

(Call logs) → **Outgoing calls** → **OK**

Use or to select the number that have been dialed, then press **SPK** key or pick up handset.

Dialing a Number from the Missed Calls List

(Call logs) → **Missed calls** → **OK**

Use or to select the number, then press **SPK** key or pick up handset to call.

Dialing a Number from the Received Call List

(Call logs) → **Received calls** → **OK**

Use or to select the number, then press **SPK** key or pick up handset to call.

Muting the Microphone


During a conversation, you can temporarily switch your phone's microphone off. The other party will not be able to hear you.



To mute your microphone, press one time on key. Your microphone is mute. You have the message Mute turned on on display.

To unmute your microphone, Press again on key. You can resume your conversation with the other caller.

Using the telephone

Using the Amplification Function

You can increase the volume according to your own hearing requirements. The button  (**Boost**) allows extrareceiving function to be activated or not during the conversation.

When the function is activated, the red light located on the button  is lit. The Boost icon  showed on the screen.



CAUTION: *This telephone can produce very high (loud) sound levels. Repeated incremental exposure to amplification levels greater than 18 dB may be harmful to people without hearing loss. Always adjust the volume control to the minimum setting after using the phone.*


Using your Phone with hearing aids

Your phone can be used with hearing aids equipped with a telecoil (T-coil). Adjust your hearing aid "T-switch" position. Make sure to hold the handset close to your hearing aid to have a good receiving volume.



Hands-free

During a call, you may turn on the speakerphone that is built into the phone. In this mode you can enjoy the comfort of a hands-free conversation.



To turn on the speaker, press the  key during a call, then replace the handset on the base. The Red LED  icon is activated.

To turn off the speaker, simply pick up the handset and you can keep on talking via the handset. The LED  icon will turn off.

Adjusting Speaker Volume

In speaker mode you can adjust the speaker volume by pressing  or  key.







Tone Response


When the boost is activated during the call, you can use **Left** () / **Right** () keys to change the tone response.







Contacts

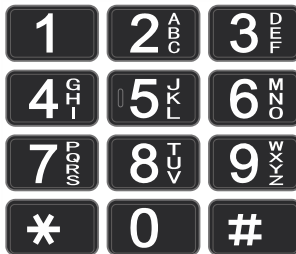Telephone numbers and names can be stored in the Contacts. This is held both on the SIM and in the phone memory. It allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the telephone number. You can search and recall numbers in order to make a call, send a message or use an entry as an emergency contact. The phone book can contain at least **500** entries. If you try to add a new entry when all the memory is filled, a warning message will be displayed. You will need to delete an existing entry in order to add the new telephone number. The contacts saved in the SIM card memory are indicated by **SIM** icon. The advantage of saving to SIM means you can transfer the information to another telephone.




Create a Phone Book Entry

1. Menu  → **Contacts** → OK  → **Options** → **New**
2. OK  → **SIM** or **Phone**, then press OK .
3. On **Name**, press OK , to select **Edit**. Create a name (15 characters maximum) for the Phonebook Entry using the numeric keypad (see below) and press  to valid your name.




4. Press on **Down**  key to select **Number** then press OK . Enter a number (20 digits maximum) for the phonebook entry and press  to valid your number.
5. Press on **Down**  key to select **Default Ringtones** then press OK , select **EDIT** then press OK . Assign a specified ringtone in select **phone ringtones** in the list of the ringtone available. You have the possibility to choose a Select from sound files or Talking name to assign a audio file name at your contact.

Phonebook



6. Press **OK**  key, press on **Down**  key to select **SAVE**, then press **OK**  to valid.

The numeric keypad also has characters printed on the keys. These characters are used for entering text for the purposes of phonebook entry and modification, SMS text writing and searching for an entry in the phonebook.






Press each key the relevant number of times to get the letter you need e. g. to get the letter **J**, press the **5** key once, to get the letter **S**, press the **7** key four times in quick succession.

To move on to the next letter, wait a second and the cursor will appear | after the last letter you entered. You may now enter the next letter. To switch between Capital and lower case letters use the **#** key. The input mode will be showed on the display. Use Up or Down key to select the input mode and press **.**  to valid.







Press **0** to insert a space.

Press the **CLEAR (Backspace)**  key to delete the last character typed in while entering a number or a name. Press and hold the **CLEAR (Backspace)**  soft key to clear the screen.

View Contacts Entries

1. **Menu**  → **Contacts** → **Menu**  or Press directly the short key  to access at the contact list.
2. Use  and  to scroll through the list until you find the desired contact. Or, you can search for a contact in the phonebook via an alphabetic search. Simply, type the first character of their name and you will be automatically positioned at the correct part of the phonebook.

Options within Contacts









1. **Menu**  → **Contacts** → **OK**  or Press directly the short key  to access at the contact list.
2. Use  and  to scroll through the list until you find the desired contact.
3. Press **OK** soft key (.

4. Options available to be performed on that contact record are as follows:









- Call**
- Details**
- New**
- Speed dial or Pictures**
- Delete**
- Delete Multiple**
- Write Message**
- Copy contact**
- Memory status**

Store number in Speed dial or Photo key

To store number in Speed dial or Photo key memory, follow these steps:

1. **Menu/OK**  → **Contacts** → **OK**  → **Options soft key**.
2. Select the **Speed dial or Pictures** item, then press  to enter the option items list: **M1, M2, M3 (3 photo keys), 2~9**, Use  and  key to select either **2~9, M1, M2, M3**.
3. Press **OK**  → **Edit** → enter the telephone number then press **OK** .
4. Press **Exit** .


NOTE: You can assign a speed dial number to a phonebook entry. This means you can dial a number very easily whenever you want simply by pressing the associated number.

1. **Menu/OK**  → **Contacts** → **OK**  → **Options soft key** → **Speed dial or Pictures**
2. Select either **2~9, M1, M2, M3**.
3. Press **OK**  → **Edit** → **Contacts**
4. Use **Up**  and **Down**  key to select your contact.
5. Press **OK** , you can see the phone number, if OK, press **OK**  to valid.
6. Press **Exit** .

SMS


Message (SMS)

Menu  → Message → Menu 

If you have received SMS message, an envelope icon  will be showed on the display.





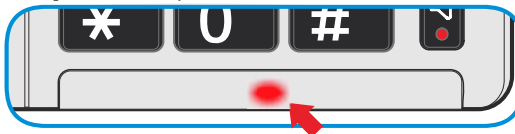







The **New message LED** will flash too (locate inside the ringer lens at around **middle position**)




Remark: The envelope icon (and New message / call LED) will be stay activated until you read the **NEW SMS** messages.



Send a Text Message

A text message using this telephone can contain up to 160 characters. This figure includes spaces.




1. Menu  → Message → **OK** → Write Message → **OK** or  short key then select **Write message**.
2. Write your text message (See text entry at **Page 26: Create a Phone Book Entry**).
3. **OK**  → **Number** → Enter Number with the keypad or press **OK** , use  key to select **Contacts** then press **OK**  key.
4. Use  and  key to select your contact, press **Options**, select **Mark** for only one contact or select **Mark all** to select all contacts then press **OK**  key.
5. **OK**  → **Send** → **OK**

Receiving a Text Message

On receiving a text, an alert tone will be audible. An envelop icon  will be displayed on the LCD or the message **1 New message**.

1. Press **READ** () key to display the message.
2. Press **OK** () key to see all the options available that can be performed on this selected text message.
3. These options include:
Delete, Reply, Forward, Call, Move, Add sender to, Details

Reviewing Stored Text Messages (Inbox)




1. **Menu** () → **Message** → **Inbox** → **OK** or  short key then select **Inbox**
2. Scroll to the message you wish to review.
3. Press **Options** () → **View** to view.

You have accessed also to these functions:

Reply, Delete, Delete all, Forward, Call, Save to contacts, Delete repeated numbers, Add to blacklist,

Outbox

The outbox stores successfully sent and saved messages.

1. **Menu** () → **Message** → **Sentbox** → **OK** or  short key then select **Outbox**
2. Scroll to the message you wish to review.
3. Press **Options** () to see all the options available that can be performed on this selected text message.
4. These options include:
View, Resend, Delete, Delete All.

Drafts

The draft box stores messages that you have saved but not sent yet. You now get the chance to send the message, resume editing or delete.

1. **Menu** (☰/ok) → **Message** → **Draft** → **OK** or (▶) short key then select **Drafts**.
2. Scroll to the message you wish to review.
3. Press **Options** (☰/ok) key to see all the options available that can be performed on this selected text message.
4. These options include: **Delete**, **Delete All** and **Edit**.

Delete SMS

You can delete messages in the **Inbox**, **Outbox**, **Drafts** or **Sentbox Messages**.

1. **Menu** (☰/ok) → **Message** or (▶) short key.
2. Select either **Inbox**, **Drafts**, **Outbox** or **Sentbox** then → **OK**.
3. Press **Options** (☰/ok) → **Delete** or **Delete All** → **OK** (☰/ok) → **OK** (☰/ok) to confirm.

Templates


You have Access at one list of different short message recorded that you can use all the days when you write an message SMS.

You have the possibility to add a new short message in the list as below:

1. **Menu** (☰/ok) → **Message** → **Templates** → **OK** or (▶) short key then select **Templates**
2. Scroll down until you see “**Empty**” and press **EDIT** (☰/ok)
3. Enter your message then press **OK** (☰/ok) key to save your new message

Broadcast Messages

This telephone supports the broadcast messages i.e. information services from your service provider.

Menu  → Message → Broadcast Messages → OK 
 → Settings → Broadcast message / Channel settings /
 Select Languages

You can select options such as choose to receive these messages, the language of broadcast together with channel setting.

SMS Settings

Service Centres distribute SMS messages. Your mobile telephone must have the telephone number for the service centre programmed into memory. Generally, this will have already been set up by your service provider.

There are many settings options such as you can set to store the messages into Sim or Phone memory. For other settings, please consult your service provider.

You can find the information:

**Message Center, SMS validity period, Status report,
 Reply path, Preferred storage.**

Message Capacity

You can find the number of contact registered in SIM or Phone memory.

SIM 1/30 : 1 message in SIM memory on 30 maximum


Phone 6/200 : 6 messages in Phone memory on 200 maximum


Note: when the number is at the maximum, you should delete the SMS to delivery more place.

Call Record

Call logs

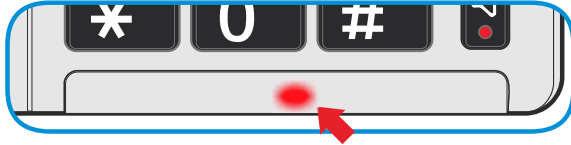


If you have missed calls, you have the message on your display **1 Missed Call** and **New Message / Call** LED will flash. The new message / call LED will be off only if you read the missed calls.








If you have missed call, **Miss call icon**  will be showed on the display.





Display Missed Calls



When you have a missed call, **miss call icon**  will appear on the display. Press **Detail** () key to review the details when you have the message 1 missed call or press **Exit** () to exit. You can also review missed calls via the menu as follows.

1. **Call logs**  → **Missed Calls** → **OK** .
2. Use  and  to scroll through the list until you find the desired contact.
3. Press the soft key **Options** () , the following will be available to perform on that call record entry:
Details, Call, Write Message, Add to Contacts, Add to Black list, Delete, Delete All

Display Outgoing Calls

1. **Call logs** → **Outgoing Calls** → **OK** (≡/ok). or press (?/←) and select **Outgoing Calls** → **OK** (≡/ok).
2. Use  and  to scroll through the list until you find the desired contact.
3. Press the soft key **Options** (≡/ok), the following will be available to perform on that call record entry:
Details, Call, Write Message, Add to Contacts, Add to Black list, Delete, Delete All

Display Received Calls

1. **Call logs** → **Received Calls** → **OK** (≡/ok). or press (?/←) and select **Received Calls** → **OK** (≡/ok).
2. Use  and  to scroll through the list until you find the desired contact.
3. Press the soft key **Options** (≡/ok), the following will be available to perform on that call record entry:
Details, Call, Write Message, Add to Contacts, Save to Phonebook, Add to Black list, Delete, Delete All

Delete All


1. **Call logs** → **Delete all** → **OK** → **Delete all?** or press (?/←) and select **Delete all** → **OK** (≡/ok).
2. Press **OK** (≡/ok) key, all the calls in the call logs will be deleted.

Call duration

This is for you to check last call, Received calls, outgoing calls and All calls duration.

Application



Application


Menu  → Application → Alarm / Timer / Bluetooth

1. Alarm

You can set or add alarm, there are up to 5 alarms available.


2. Timer

Count down timer is available, Press **Options** () → **Start** → **OK**() to start counter down.

You have the possibility to press on short key Stop  to stop the counter and press again  2 times to restart.


3. Bluetooth

You can pair with a Bluetooth headset here.

If Bluetooth is **ON**, Bluetooth icon  will be showed on the display.











Select **Paired device** and **Add new device** to search the device to pair.

After Select this device and press short key **Pair**  to pair.

Name Recorder

User can record your own files (up to 5 max) and assign it for Contacts ring tone.

After you record your files, go to **Contact**,

1. Use  and  key to select the phone contact (doesn't work with the SIM contacts) then press "**Options**" softkey.
2. Press  key to select "**Details**" then press OK key.
3. Press "**Options**" softkey, select **EDIT** then press OK key.
4. Press  key to select "**Default Ringtones**" then press OK key.
5. Select **EDIT** in pressing OK key.
6. Press  key to select "**Select from soundfiles**" then press OK key.
7. Use  and  key to assign the sound file for your contact then press **Options** softkey, select **OK** then press OK key to valid.
8. Press **Options** softkey, select **SAVE** and press OK key.
9. Press  to exit.

SOS






SOS

A waterproof SOS bracelet is provided with your CL9000. You can press SOS button from the bracelet (or SOS key on the phone) when emergency.


To have your SOS emergency call, you need to setup your SOS emergency numbers.



Menu  → SOS

1. Press **OK**  → **Mode**, Use  and  key to select **OFF**, “**SOS 5 numbers**” or “**Set call centre**” then **OK**  key. If SOS is set to **ON**, “**SOS**” icon  will be showed on the display.



2. Then go to “**SOS number**” to set your SOS numbers (up to 5 number) or “**Call center number**” to set your emergency service number (your emergency service provider number).
3. Then go to “**SOS message**”, there is a default message “I have triggered my emergency key. Contact me immediately”. You can edit this message. Use **CLEAR** left softkey to delete an character.
Note: During SOS dialing progress, this emergency message will be sent to your SOS number too.
4. You can now set the Emergency outgoing voice. It has default voice and user recordable. During emergency, the emergency voice will be played to the line.
5. Then you can use your SOS bracelet or **SOS** key  (on the phone) if emergency.

Note: If you want to add one or more SOS bracelet, you can pair up to as many as you can.

SOS Function

In an emergency, you can press the SOS button for help during **3 seconds**.

If you have preset an **SOS message**, once you press the **SOS** button, the phone will send the SOS text message at your SOS number before to dial this SOS phone number.

Up to **5 numbers** can be preset on the SOS number. The phone will dial numbers on this SOS list automatically one by one. If a busy tone is detected or a call is aborted by user, the next number will be dialled immediately. The phone will dial these numbers until the another end user press “**0**” to accept the call.



If any one press **0**, the SOS will be stopped.

If no one press **0**, it will dial all 5 number repeatedly.

If you want to quit the SOS mode press **SOS** button again **3 seconds**.


SOS Number Settings

You can set up to 5 SOS numbers or set a number for a call centre.

1. Menu  → **SOS** → **SOS number** → **Select an SOS number from 1 to 5** → **Enter the SOS number using the numeric keypad then valid in pressing OK** 

(depending on whom you would like to call at a time of emergency).

or

2. Menu  → **SOS** → **Call center number** → **Enter the Emergency Services number using the numeric keypad then valid in pressing OK** (if you want to make an SOS call to **Emergency call center**, then you need to activate “**Set call center**” in **SOS** → **Mode** → **Set call center** → **OK**).




SOS Announce Message

If you have set the mode on call centre, you have the possibility to remove the SOS announce message.

Select **ON** for that the phone send the SOS announce message and **OFF** to remove the SOS announce message.

SOS Message Record

Record an informative message that will assist your helpers in time of emergency e.g. **"This is Jane Smith calling, I have hurt myself. Please come to my house and help me, press 0 to accept the call"**.

Menu  → **SOS** → **Set outgoing voice message** → **Custom** → **Recorder**, Press **OK**  key to start the recording. If you finish the recording, press **Save**  (the message can be up to 20 seconds long).

You have the possibility to listen the message in select **"PLAY"**
If you prefer the SOS factory message, select **"DEFAULT"** instead of custom

SOS Text Message

You can enter the SOS text message. This will be sent to first SOS number on your list.

Menu  → **SOS** → **SOS message** → **Type an informative text message** → **OK** 

You can use **"CLEAR"** left software key to delete an character.

Pairing a new SOS remote

You have the possibility to add more SOS remote.

To pair a new one, follow this procedure:

Menu  → **SOS** → **Pairing settings** → **Select add a new one SOS remote** → **OK**

Press on the red button of your new one SOS remote.

The screen displays **"Paired successfully"** to confirm that your new one SOS remote is paired.

You have the possibility to remove all SOS remote in select **"Delete all SOS remote"** then press OK to confirm.

Battery replacement

Press shortly the SOS button on the emergency call. The LED lights up. If the LED no longer lights up when the button is pressed and held, replace the battery as below.


- Remove the 2 screws on the rear side of the emergency call unit using a small, crosstip screwdriver.
- Insert the tip of a small screwdriver in the notch and open the housing.
- Replace the battery CR2025. Only use battery of the same type. Pay attention to correct polarity.
- Close the housing and place the 2 screws.

Range

Your remote has a **20-30-meter** transmission field between the transmitter and the phone when pressed. This field depends of the materials in the wall and the radiation from electrical appliances

Technical specifications

TECHNICAL SPECIFICATIONS

Carrier frequency	: 433 MHz (Remote)
Remote Range	: Up to 20~30 meters (open area)
Remote weight	: 30 grams
Operating voltage	: Telephone base: DC 5V  2.0A, 10W : Rechargeable Li-polymer battery: 3.7V, 900mAh : Remote: 3V Li-metal Battery CR2025
Radio Frequency Power	: <20 dbm

Main feature:

- 4G (LTE-FDD)
- 3G - CDMA: 2100 /1900 / 900 / 850
- 2G - 850 / 900 / 1800 / 1900
- RF 433Mhz SOS remote bracelet
- NANO SIM socket
- 3 x Photo keys
- Talking keypad / caller ID (talking number/user recordable)
- User recordable SOS message
- 500 phone book memory
- 90dB Loud ringer
- User changeable ring tone
- +40dB Amplification receiver volume with Led indicator Big button
- Big dot matrix display (128 x 64)
- 12 LCD display languages (English / French / German / Spanish / Portuguese / Arabic / Dutch / Italian / Hebrew / Russian / Polish / Czech)
- 80 call log (time/day of call)
- 200 SMS messages
- Real time clock (12/24 Hrs. display)
- New call indication: LED and icon
- Caller ID memory call back
- 2-way speaker phone with LED indication
- Last Number Redial
- Ringer indicator (Red LED)
- Hearing aid compatibility (ETS300381 prefer range)
- Blue tooth (support Blue tooth headset)
- Desk top and Wall mountable
- 3.5mm Audio in out socket

Troubleshooting

Telephone cannot be switched on

- Check battery is inserted, check that it is inserted correctly and that the power adaptor is plugged.

Nothing appears on the display

- Check the phone is switched on.
- Check the battery and SIM are inserted properly.
- Check that the power adaptor is plugged properly.

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM.

No signal icon is displayed

- There is no network connection. Move around to try and get to an area where there may be coverage.
- Contact your service provider.

Message to say that a function is not possible

- Your service provider might not provide the function in question or you may need to subscribe to that service. Contact the service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed

- Ensure the SIM is inserted correctly.


The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours.

Failure to link to the network

- The signal is too weak, or there may be some radio interference.
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

Cannot make a Call

- Check that mobile fees have been paid.
- Check that the SIM card is valid.
- Ensure you have pressed the  button.
- Is the SIM card registered to the network?
- Is the bar outgoing calls feature enabled?
- There may be a problem with the network, call your service provider.

Cannot answer a call:

- Check that mobile fees have been paid.
- Check that the SIM card is valid.
- Is the bar incoming calls feature enabled.
- Is the call diverting function enabled.

No audible ringer

- Make sure the ringer is not set on low position.
- Make sure that the phone is not in Silence mode.

No amplification

- Check to see if the Amplify key is "On". The red light +40 dB should be lit.

Noise, Static, Interference while using the handset

- Check that you have a correct network in checking the number of bars.
- Move the phone and check that the quality is better.

Caller ID information does not show

- The caller may have withheld their details.

Safety information

General

Only use the power supply included with the product.

Only use the approved rechargeable battery supplied.

Do not open the base (except to replace the batteries or SIM) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and / or the release of toxic chemicals.

If you are sure you are not going to use the telephone for over a month, remove the battery

Cleaning

Clean the telephone with a soft cloth. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

The telephone is designed for working within a temperature range of 5°C to 45°C.

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the device at a refuelling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

Hearing AID information

Some phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

Network services

To use the phone, you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

Guarantee

From the moment your Geemarc CL9000 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

**Please note: The guarantee applies to the
United Kingdom only**

DECLARATION: Geemarc Telecom SA hereby declares that this CL9000 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

*The declaration of conformity may be consulted at
www.geemarc.com.*

**UK
CA**

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

SAR Test:
Head : 0.01 W/kg
Body : 1.647 W/kg
LIMBS : 2.977 W/kg

Recycling directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at
www.geemarc.com

E-mail : help@geemarc.com

Telephone : **01707 387602**

Parc de l'étoile, 2 rue Galilée, 59760 Grande-Synthe, France.

lines are open 09h00 to 16h00 Mon to Fri

Made for Geemarc Telecom S.A. in China





UGCL9000_En_V1.0